



## Handpiece Tubing Connections:

1. Connect nut on tubing to handpiece.
2. Opposite end of tubing looks like diagram below when facing you. Connect this end to handpiece block.

Water  
Coolant



Drive Air

Water  
Coolant


Air  
Coolant



Drive Air

Water  
Coolant

Air  
Coolant

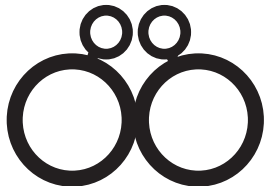


Drive Air

Exhaust

## Typical Handpiece Block

Connect handpiece tubing to points illustrated.  
(Unlabeled barbs are for input. Individual blocks may vary.)

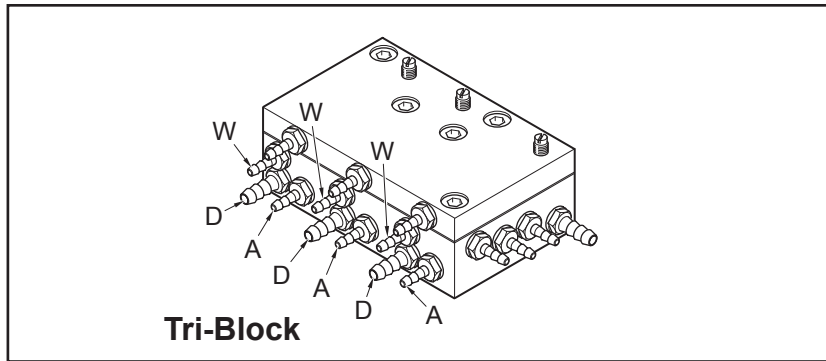

*A = Air Coolant, W = Water Coolant, D = Drive Air*