



5851 and 5853 Diaphragm cleaning instructions:

Disconnect and drain all tubing before proceeding.

Step 1: Remove 2 5/64 allen head screws retaining mounting bracket and diaphragm cover using a 5/64 allen key.



Step 2: Remove 2 5/64 allen head screws retaining diaphragm cover using a 5/64 allen key and remove cover.



Step 3: Carefully remove orange diaphragm from housing – wipe any debris off of both sides of the diaphragm.



Step 4: Clean all debris from sealing surface on diaphragm housing.



Step 5: Carefully replace diaphragm and orient diaphragm ridge into housing pocket. Replace cover and bottom 2 screws.



Step 6: Place last 2 screws and bracket into housing as shown.



Step 7: Reinstall all tubings – valve is now ready for use.