

Topic: Tech Tip

Step 3.

Using a flat head screwdriver, tighten the brass yoke pivot screws equally on both sides about $\frac{1}{2}$ a turn. Readjust until you get free and easy movement.

Note: Be careful not to damage the wire running through the yoke.

Step 1.

Remove the end caps on either side of the yoke.

Step 4.

Retighten the yoke set screws once desired tension is attained.

Step 2.

Loosen the yoke set screws on both sides using a $\frac{1}{16}$ " hex wrench turning them one full turn.

