

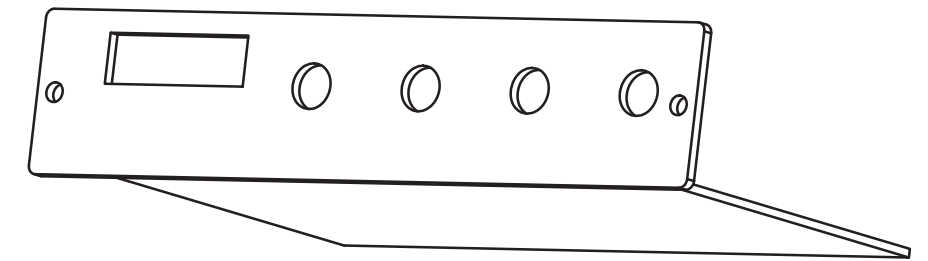
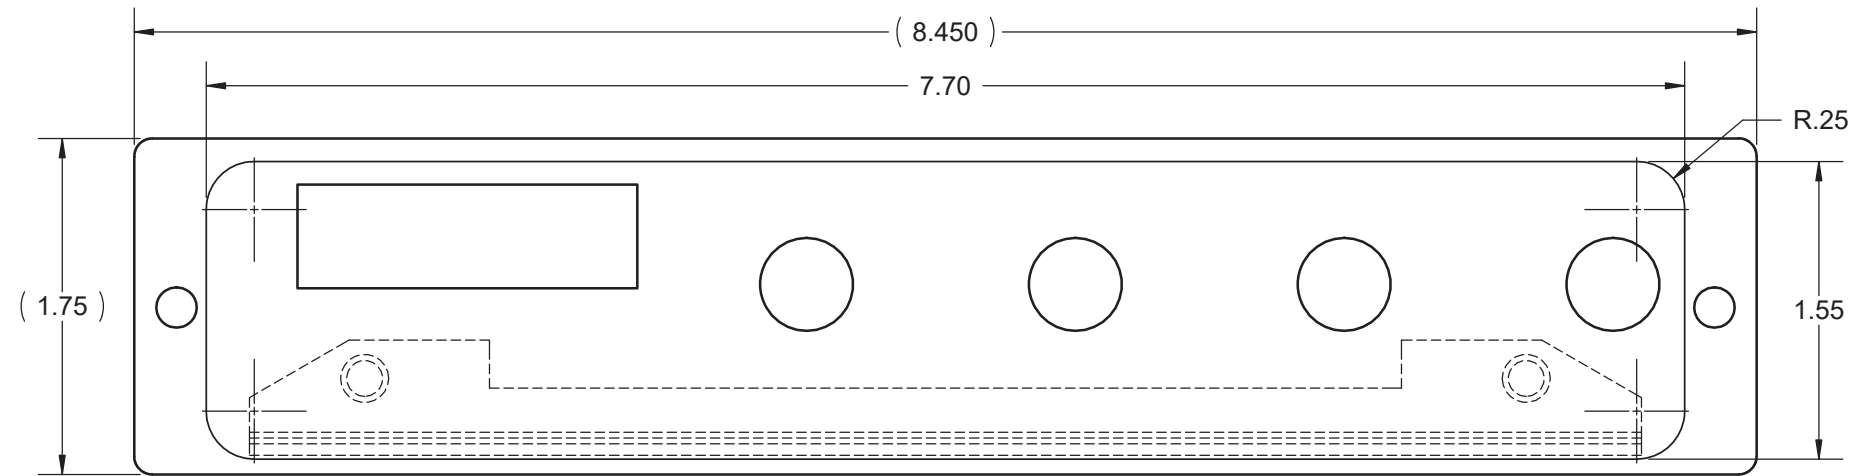


PANEL MOUNT CUT OUT TEMPLATE

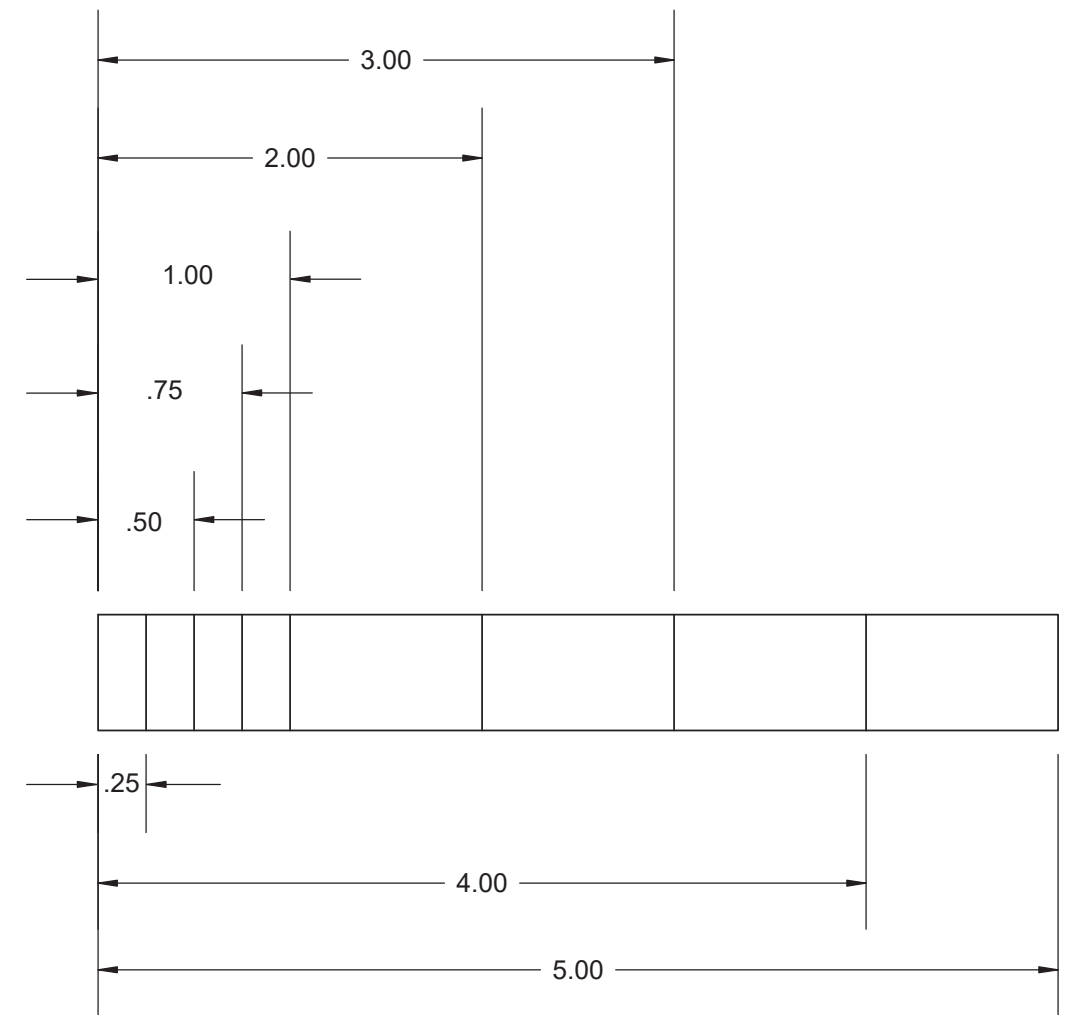

ISO VIEW REF.

NOTE: MUST BE PRINTED ON 11 x 17
OTHERWISE USE SCALE BELOW

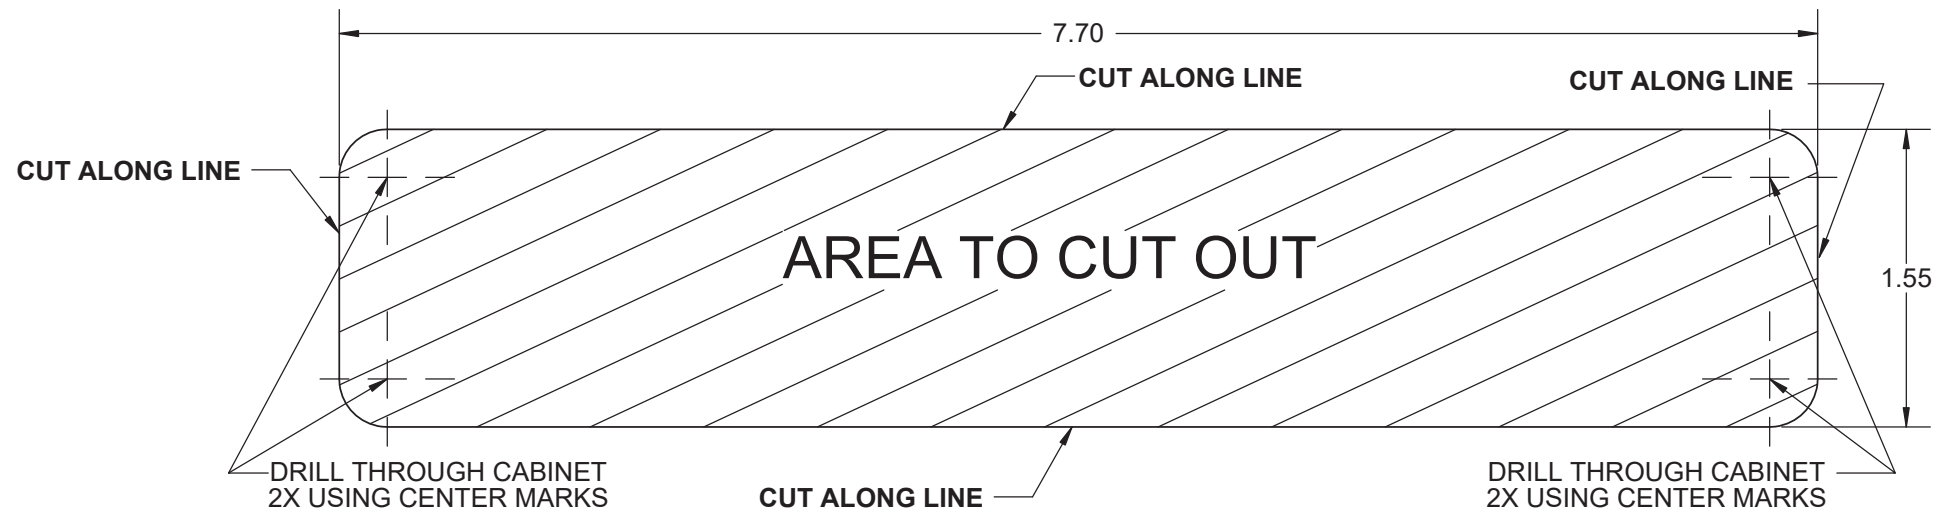

NOTES:

1. POSITION AND LEVEL TEMPLATE ON CABINET FACE.
2. MARK AND DRILL 4 1/4" HOLES THROUGH CABINET FACE IN POSITIONS INDICATED.
3. MARK AND CUT ALONG THE FOUR LINES INDICATED THROUGH CABINET FACE.
4. REMOVE CUT OUT PORTION OF CABINET FACE.
5. REFER TO INSTALLATION INSTRUCTIONS FOR TUBING CONNECTIONS.
6. SLIDE UNIT INTO CUT OUT AND ATTACH USING APPROPRIATE FASTENING HARDWARE.